



A-Stand Instruction

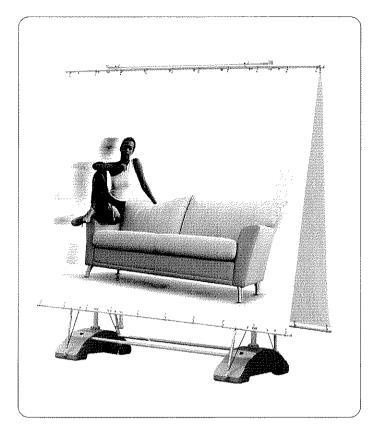

Spare Parts list

 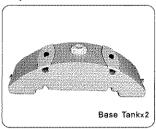


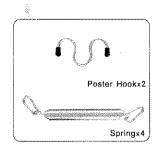

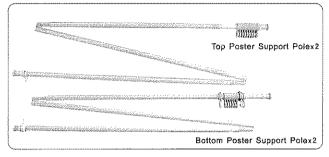




Instruction









 3. Take off the axis in the




the picture show, the tank can hold 22.5 liter.

 

 


tank and take it off

 7. Tighten the cover.



 
10. Put the short level pole







 
13. Take off the screw on the straight pole.




with the straight pole.



 
Tighten the screw of the straight pole.



ght pole to the ring on the tank.

 



18. Connect the spring with the iron ring on the tank.

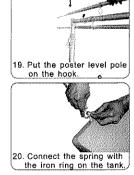



  
of the spring with the hook on the bottom lever pole.







 After open the lock, pull flex pole upwards to make the graphic smooth,



straight pole.

